
OPAI

CRES Motor







WIND-H

ELECTRIC SCOOTER

Semi Knocked Down Assembly Guide

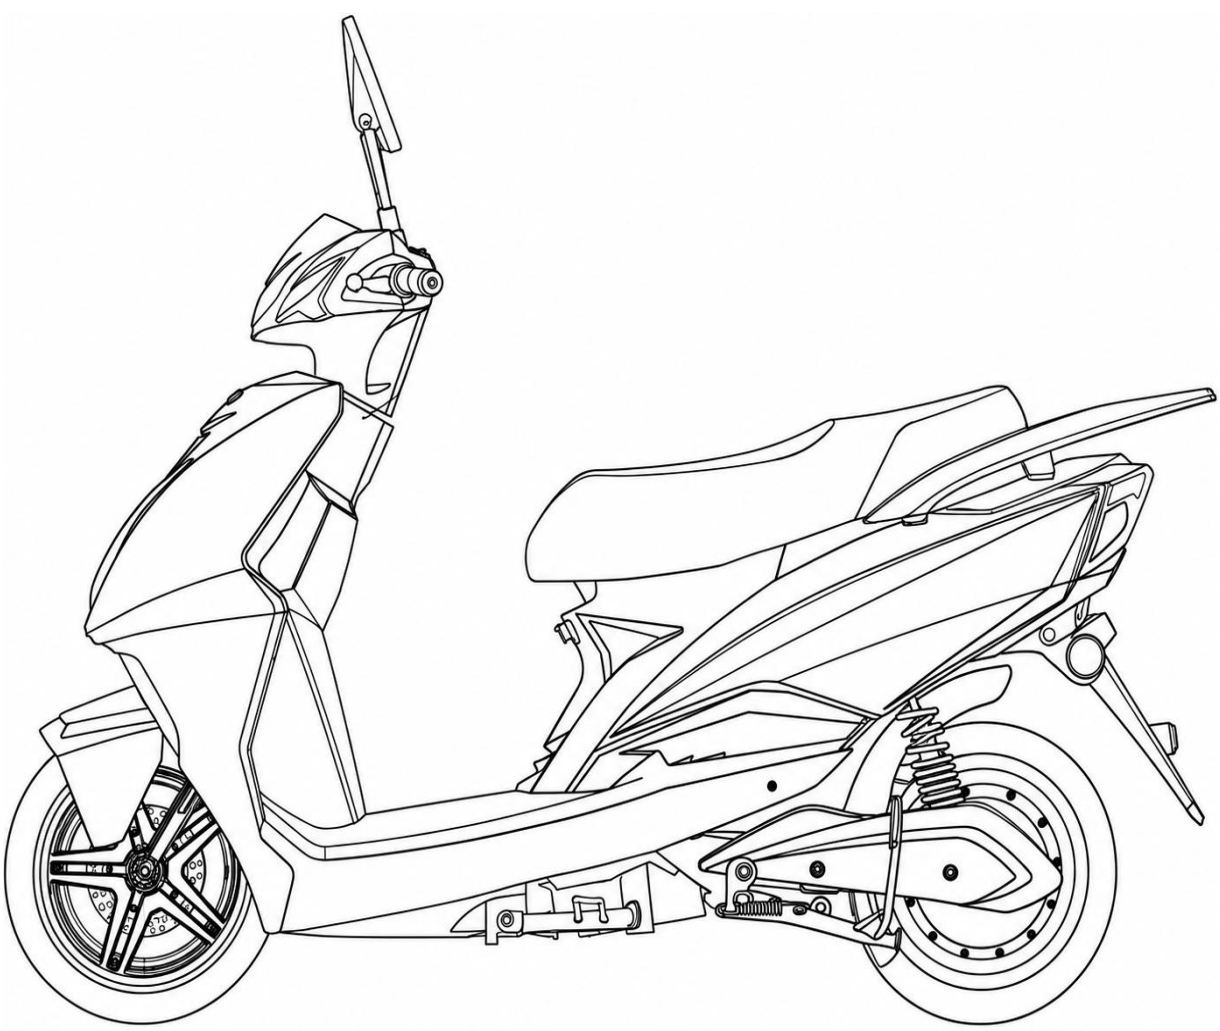


Packing List and Tooling: The Following Accessories are Packed in Grip Seal Bags inside the Seat Bucket

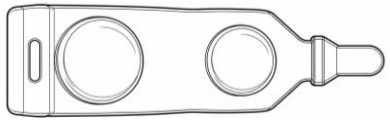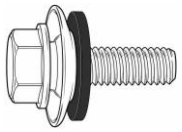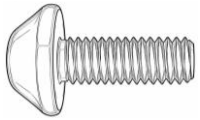
Item:	Picture:	Quantity:	Tooling:
Headset Bolt Set		1	12mm Wrench Socket to the Front 14mm Wrench Socket to the Back
Headset Bolt Wrap		1	
Tail Rack Bolt Set		4	10mm Wrench Socket
Front Mudguard Bolt		4	5mm Hex Key
Front Shaft Nut Cap		2	
Front Cover Screw (Big)		2	PH2 Screwdriver
Front Cover Screw Clip		2	
Front Cover Screw (Small)		4	PH2 Screwdriver

***Unpacking Note:** To remove the shipping box frame nuts counter-hold the bolt head with a 12mm socket and apply opposing torque to the nut with a second 10mm wrench or socket until it breaks loose.

Step 1: Mounting the Headset and the Tail Rack

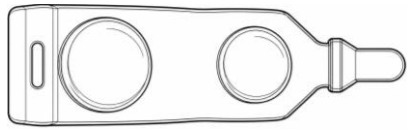


Headset Bolt Wrap

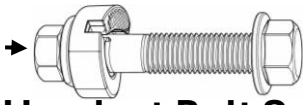

Headset Bolt Set

- Correct direction of the headset bolt set when mounted.

- A small black ‘collar’ panel maybe removed for better access for power tools to mount the headset bolt set.
- Please wrap the headset bolt set with the black wrapping strip after mounting to protect it from moisture.

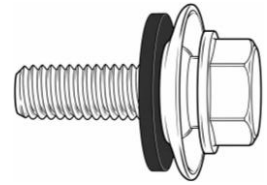



Tail Rack Bolt Set x 4

Headset


Secure

Insert

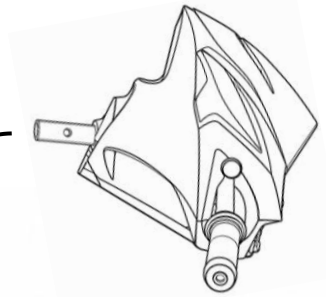


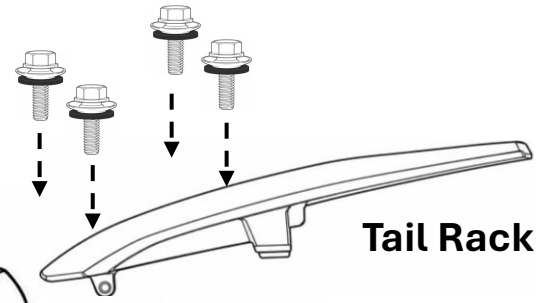


Tail Rack

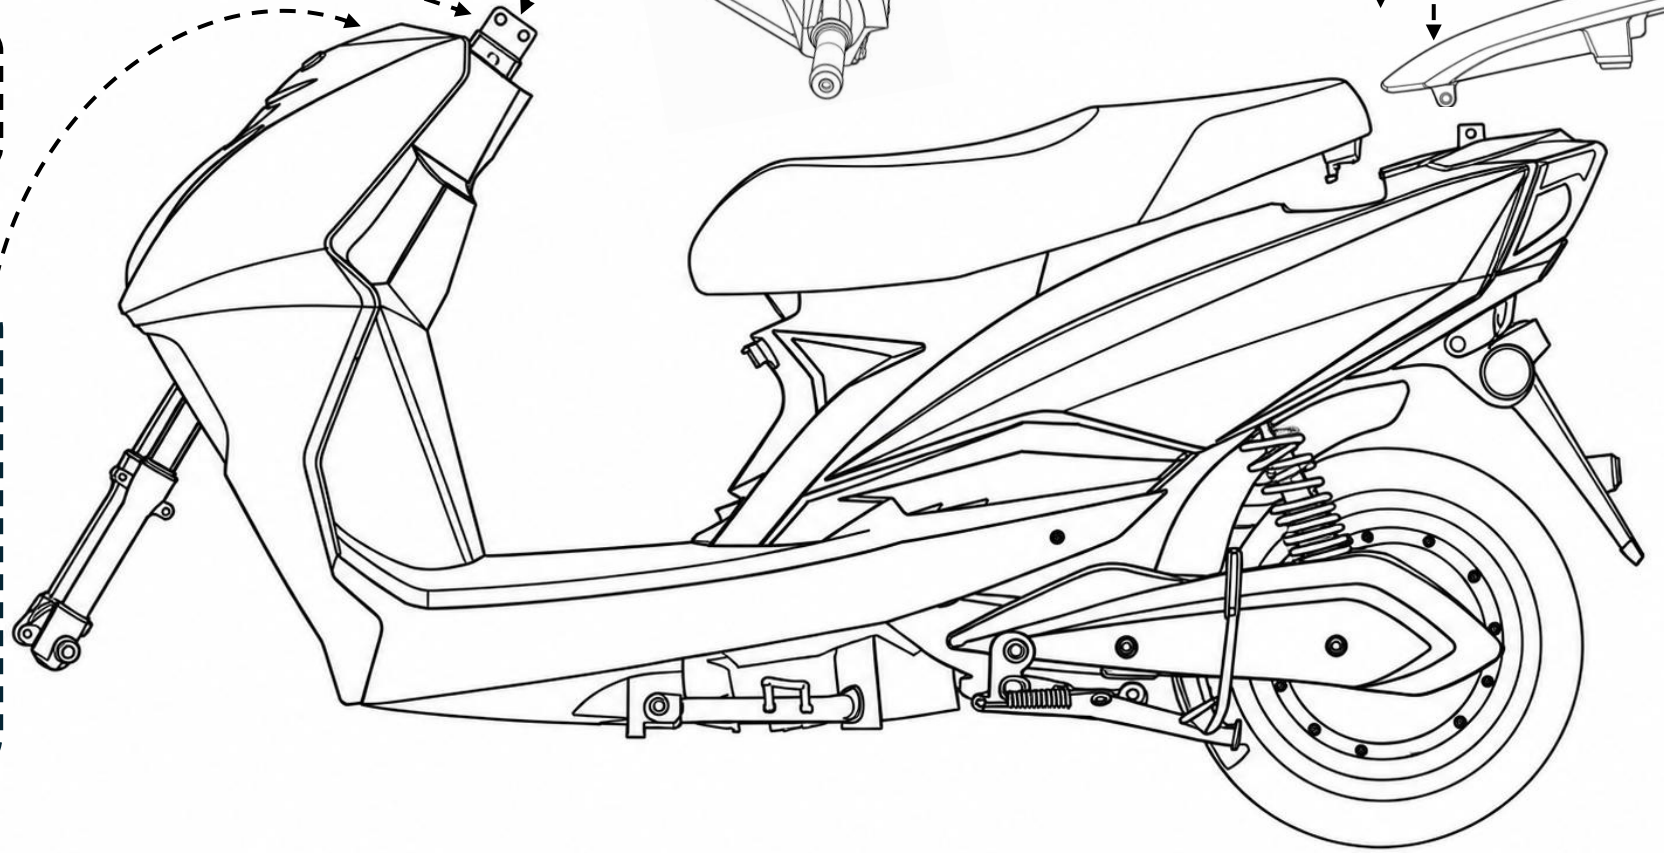

Step 2: Mounting the Front Wheel, Front Brake Caliper and the Front Mudguard

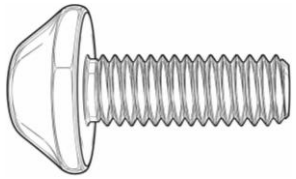

Front Mudguard Bolt x 4

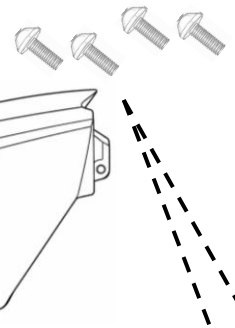


Front Mudguard




Front Shaft Nut Cap x 2

- To be put on after finishing mounting the front wheel.

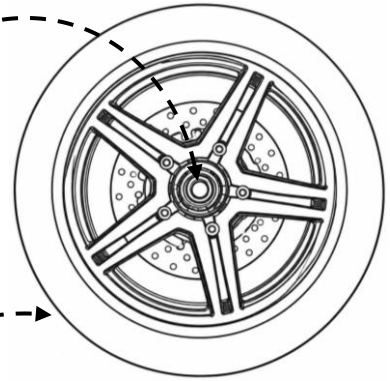

- Correct facing of the front wheel.
- The brake disc should be on the right side of the bike.

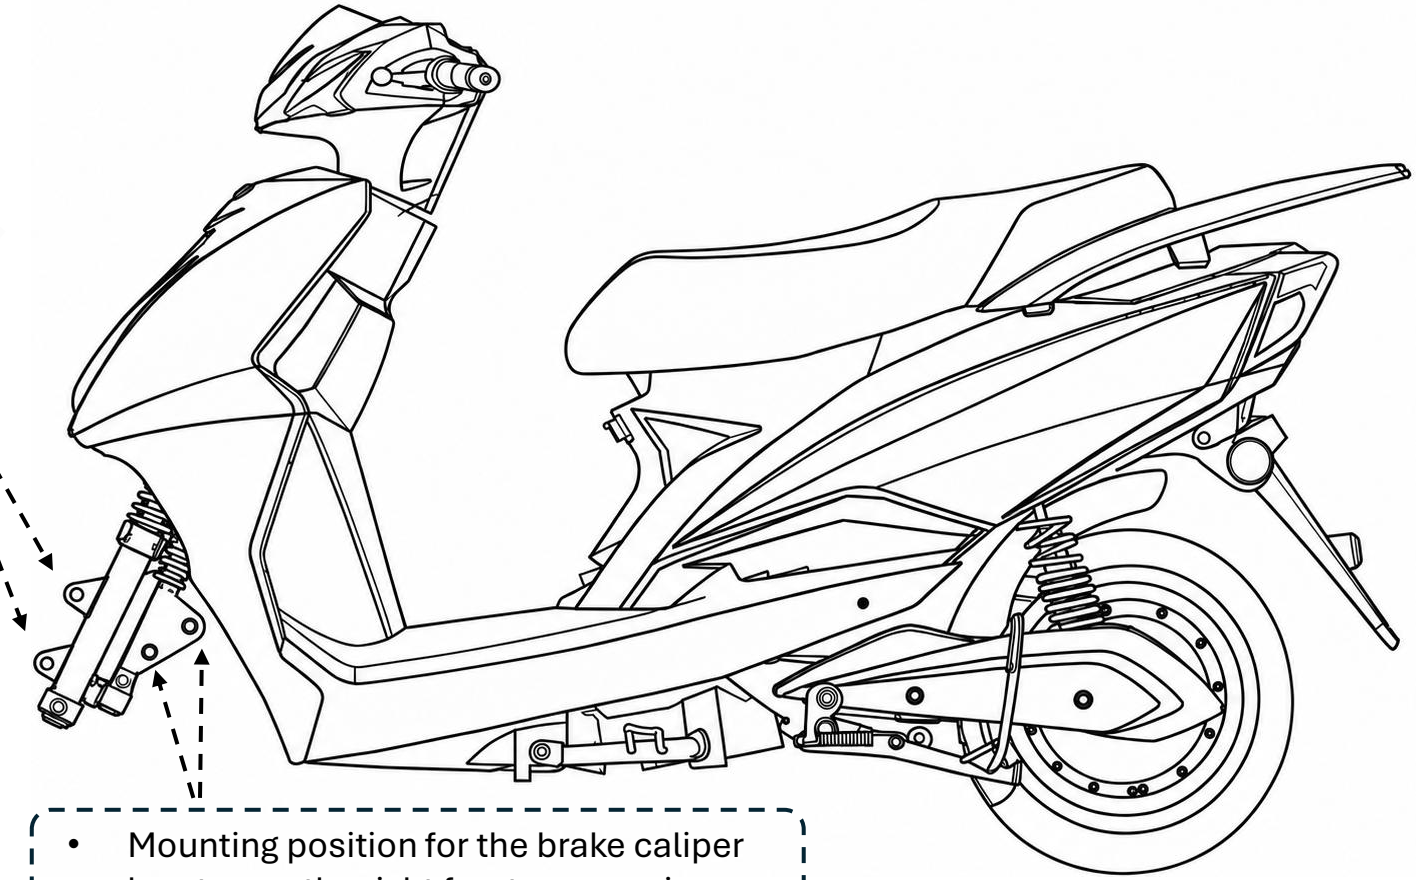

- Mounting position for the brake caliper locates on the right front suspension.

1. Mount the front wheel: use the front wheel shaft (shaft, fixing nut, 2 flange bushings of different length) assembly attached to the bike.
2. Spin the front wheel to check for smooth running. Put on the 2 wheel shaft nut caps on each side.
3. Mount the front disc brake caliper to the right side of the front fork with the bolt and washers attached to the mounting points on the bike.
4. Mount the front mudguard.

Step 3: Mounting the Front Cover Panel, Mirrors


- **Direction of screw clip insertion:**


The flat surface of the screw clip should face the upward side whereas the curved surface with the protruding stamped screw holes should face downward side.

- **Caution:**

Please take care to align the front cover panel screw holes with the mounting locations. When completed the gap between the headlight and the front cover panel should normally not more than the thickness of fingernails.


Front Cover Screw Clip x 2

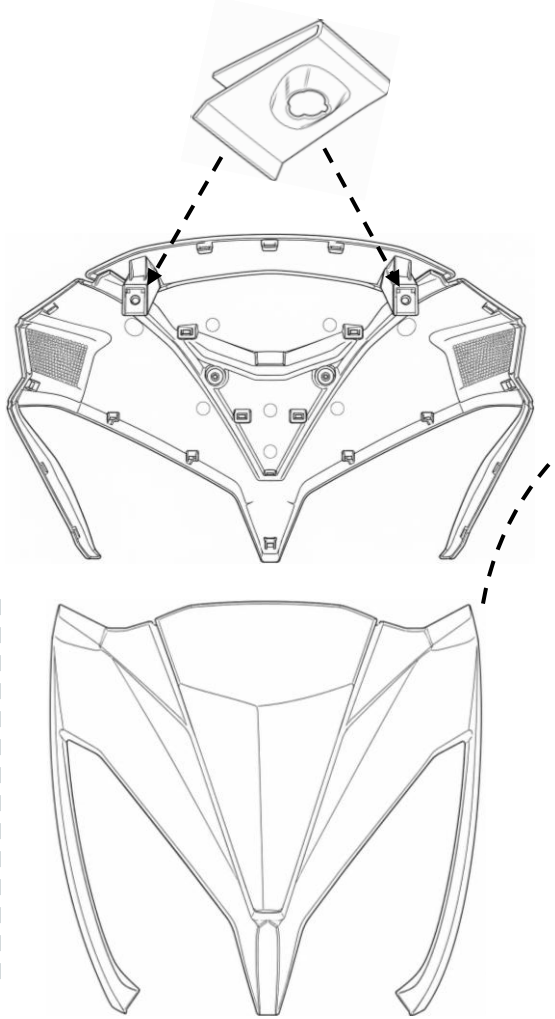

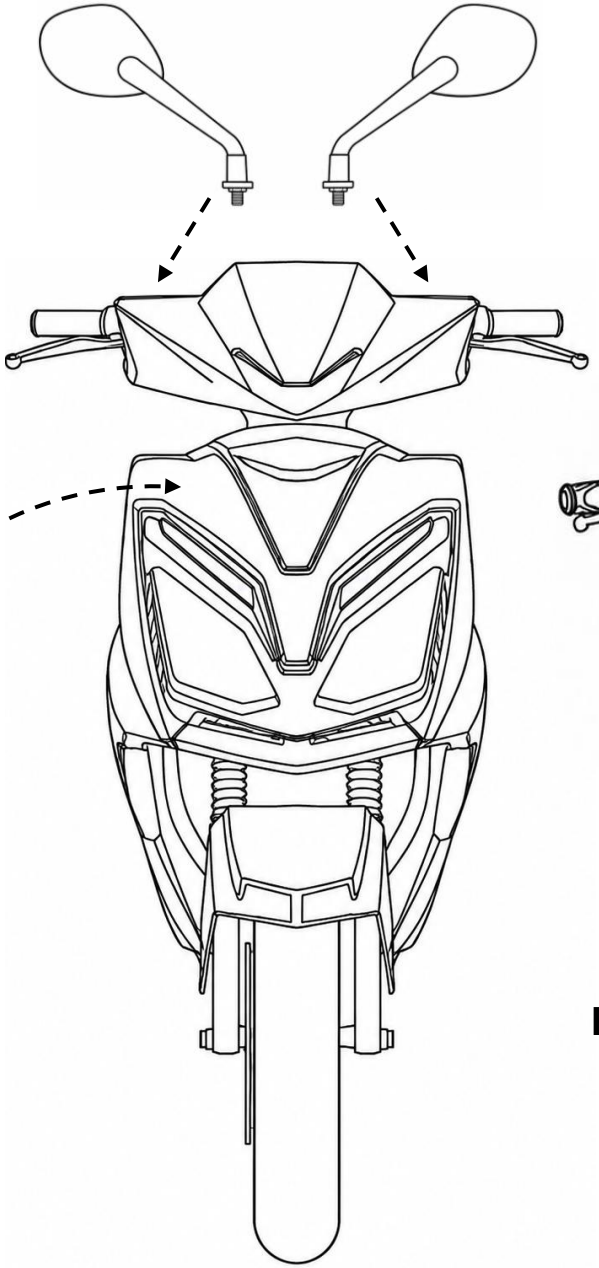



Front Cover Screw (Big, PH2) x 2

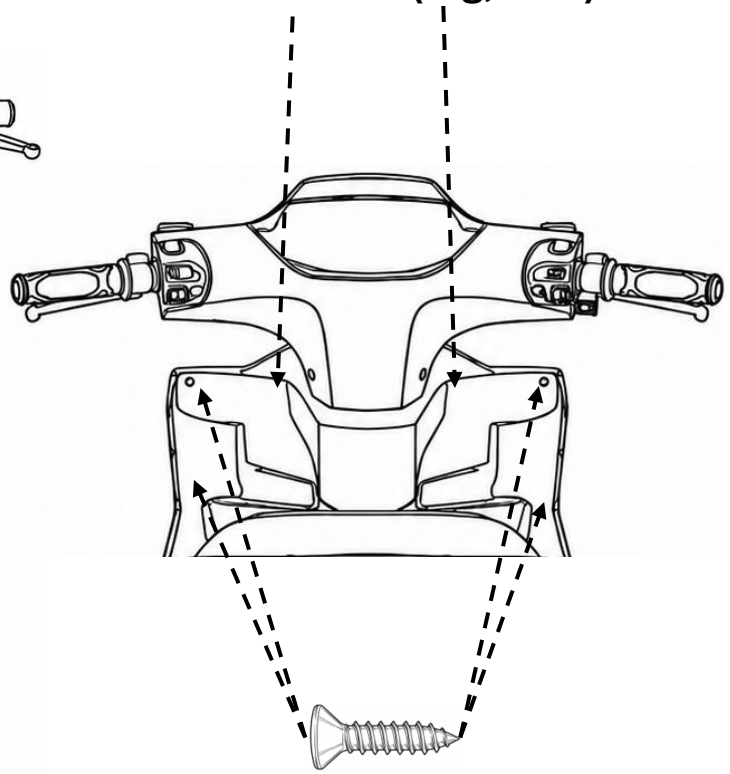

Front Cover Screw (Small, PH2) x 4